

TOTAL360

COVERED COMPONENTS

COVERED COMPONENTS	TIER 1	TIER 2	TIER 3
Engine	✓	✓	✓
Transmission	✓	✓	✓
Differential	✓	✓	✓
Turbo		✓	✓
Aftertreatment		✓	✓
Engine Accessory		✓	✓
Electrical		✓	✓
Cabin Comfort			✓
Steering			✓
Suspension			✓
Brakes			✓
APU (add-on)			✓
Hydraulics (add-on)			✓

HEAVY DUTY TRUCKS

TERM OPTIONS & LIMITS OF LIABILITY

6 Months	Unlimited Miles/KM	
Total Aggregate Limits of Liability		
TIER 1 : \$17,500	Tier 2: \$30,000	
12-48 Months	Unlimited Miles/KM	
Total Aggregate Limits of Liability		
TIER 1 : \$35,500	TIER 2: \$65,000	TIER 3: \$100,000

MEDIUM DUTY TRUCKS

TERM OPTIONS & LIMITS OF LIABILITY

TERM OPTIONS & LIMITS OF LIABILITY		
6 MONTHS	Unlimited Miles / KM	
Total Aggregate Limits of Liability		
TIER 1 : \$13,000	TIER 2 : \$26,000	
12 - 24 MONTHS	Unlimited Miles / KM	
Total Aggregate Limits of Liability		
TIER 1 : \$27,000	TIER 2 : \$51,000	TIER 3 : \$85,000

TIER 1

TIER 2 (INCLUDES TIER 1 COVERAGE)

ENGINE Internally Lubricated Parts Including:

- Connecting Rods
- Connecting Rod & Main Bearings
- Constant Velocity Valve
- Crankshaft
- Cylinder Liners*
- Engine Block*
- Main Thrust Washers
- Pistons
- Piston Rings
- Timing Chain & Gears
- Timing Chain Tensioners
- Timing Gear Cover
- Wrist Pins

LUBRICATING SYSTEM

- Oil Pan
- Oil Cooler & Housing
- Oil Pump Housing & Gears
- Oil Pump Pick Up Screen & Tube
- Oil Pump Pressure Relief Springs & Valves
- Piston Oil Cooling Jets

OVERHEAD COMPONENTS

- Cam Followers
- Camshaft
- Camshaft Bearings
- Cylinder Head*
- Hydraulic Lifters
- Intake/Exhaust Valves
- Intake/Exhaust Valve Guides
- Pushrods
- Rocker Arms
- Rocker Arm Shafts
- Valve Keepers (locks)
- Valve Retainers
- Valve Springs
- Valve Cover

RELATED ITEMS

- Exhaust Manifold
- Flywheel Housing
- Intake Manifold
- Vibration Dampener

*THE ENGINE BLOCK, CYLINDER LINERS, & CYLINDER HEADS ARE COVERED ONLY IF DAMAGED BY A COVERED COMPONENT.

DIFFERENTIAL(S)

Internally Lubricated Parts Including:

- Axle Shafts
- Bearings
- Bushings
- Carrier Case
- Gear Sets
- Power Divider Bearings
- Gears
- Shafts
- Shift Fork
- Differential Housing*

*THE DIFFERENTIAL HOUSING IS COVERED ONLY IF DAMAGED BY A COVERED COMPONENT

TRANSMISSION

Internally Lubricated Parts of the Manual or Automatic Transmission Including:

- Bands
- Bearings
- Blockers
- Bushings
- Drums
- Gear Sets
- Governor
- Input Shaft
- Oil Pump
- Shaft(s)
- Shift Forks
- Synchronizers
- Thrust Washers
- Torque Converter
- Transmission Case*
- Valve Body

*THE TRANSMISSION CASE IS COVERED ONLY IF DAMAGED BY A COVERED COMPONENT

ENGINE Internally Lubricated Parts Including:

- Balance & Timing Belt Tensioners

OVERHEAD COMPONENTS

- Variable Valve Camshaft Adjuster

FAN/FAN DRIVE ASSEMBLIES

- Belt Tighteners
- Fan Blades & Shroud
- Fan Clutch
- Fan Group
- Harmonic Balancer

DIFFERENTIAL(S) Internally lubricated parts including:

- Thrust Washer(s)

ENGINE ACCESSORY

COOLING SYSTEM

- Alternator
- Charge Air Cooler
- Engine Thermostat
- Engine Thermostat Housing

FUEL PUMPS

- Fuel Injection Pump
- Fuel Lift Pump
- Fuel Prime Pump
- Fuel Transfer Pump
- High/Low-Pressure Fuel Pump

FUEL INJECTORS

- Failed Injectors
- Failed Injector Cups
- Fuel injector Hard Lines
- Fuel Intake Manifold
- *Fuel Injector Tubes & Seals

RADIATOR

- Radiator

STARTER

- Armature
- Bearings
- Boot
- Brushes
- Brush Holder
- Bushings
- Coil
- Commutator
- Drive Assembly Insulator
- Jumper
- Magnet
- Motor Shaft Lever & Spring
- Plunger
- Solenoid
- Starter Drive Gear

TURBOCHARGER(S)

- Actuator
- Bearings
- Internal Variable Vane Assembly
- Turbines
- Turbine Shaft
- Turbocharger Housing
- VPOD
- Wastegate

WATER PUMP**

- Bearings
- Housing
- Impeller
- Seals
- Water Manifold

NO PROGRESSIVE DAMAGE

TRANSMISSION

Internally lubricated parts of the Manual or Automatic transmission including:

- XY Shifter
- Clutch*

CLUTCH COVERED IF FAILED; PARTS ONLY AND NO PROGRESSIVE DAMAGE

AFTERTREATMENT

DIESEL EXHAUST FLUID SYSTEM

- (DEF) Heated Lines
- (DEF) Heater Control Relay
- (DEF) Heater Coolant Control Valve
- (DEF) Heating Elements
- (DEF) Heating Fittings
- (DEF) Injection Nozzle
- (DEF) Module
- (DEF) Pump
- (DEF) Tank

EXHAUST GAS RECIRCULATION (EGR)**

- BPV Actuator
- BPV (Back Pressure Control Valve)
- EGR Actuator
- EGR Connecting Bellows & Clamps
- EGR Cooler(s)
- EGR Cooler Lines
- Exhaust Piping/ Clamps/ Gaskets
- Exhaust Throttle Valve
- EGR Valves

NO PROGRESSIVE DAMAGE**

DIESEL PARTICULATE

- Diesel Particulate Filter (DPF)
- DPF Air/ Fuel/ Coolant Lines
- DPF Air/ Fuel/ Manifold Assembly
- DPF Dosing Module

SELECTIVE CATALYTIC REDUCTION

- Selective Catalytic Reduction (SCR) Catalyst
- Selective Catalytic Reduction (SCR) Decomp Pipe/Elbows

HYDROCARBON DOSER SYSTEM

- Diesel Oxidation Catalyst (DOC)
- Hydrocarbon Doser Injector (HC Doser, 7th Injector, ARD, AHI Module)
- Hydrocarbon Doser Valve - Air/Fuel/Coolant Lines & Inline Air Filter
- Hydrocarbon Doser Valve (Voss Valve)

ELECTRICAL

- After Treatment Control Module (ACM)
- Electronic Control Module (ECM) - Includes the ECM Unit

SENSORS- AFTERTREATMENT

- Aftertreatment Regeneration Flame Detection Temperature Sensor
- ASM Sensor
- Back Pressure Valve Temperature Sensor
- Back Pressure Valve Pressure Sensor
- Burner Flame Temperature Sensor
- Catalytic Converter (downstream) NOX Sensor
- Catalytic Converter (upstream) NOX Sensor
- Catalytic Converter Temperature Sensor
- Catalytic Reduction Actuator (downstream) Temperature Sensor
- Catalytic Reduction Actuator (upstream) Temperature Sensor
- Catalytic Reduction Actuator Temperature/Fill Level Sensor
- Catalytic Reduction Actuator Temperature/Moisture Sensor
- Clean Gas Induction (CGI) Cooler Combustion Air Delta Sensor
- Clean Gas Induction (CGI) Cooler Pressure Sensor
- Clean Gas Induction (CGI) Cooler Temperature Sensor

- Compensation Sensor
- Delta P Sensor
- Diesel Exhaust Fluid (DEF) Tank Fill Level Sensor
- Diesel Exhaust Fluid (DEF) Temperature Sensor
- Diesel Exhaust Fluid (DEF) Quality Sensor
- Diesel Exhaust System Nitrogen Oxide (NOx) Sensor
- Diesel Oxidation Catalyst (DOC) Gas Temperature Sensor
- Diesel Oxidation Catalyst (DOC) Pressure Sensor
- Diesel Particulate Filter Ammonia Sensor
- Doser Valve Pressure Sensor
- Exhaust Aftertreatment Fuel Control Module Sensor
- Exhaust Aftertreatment Particulate Trap Differential Pressure Sensor
- Exhaust Aftertreatment Pressure Sensor
- Exhaust Back Pressure Sensor
- Exhaust Gas Recirculation (EGR) Monitor Sensor
- Exhaust Gas Recirculation (EGR) Position Sensor
- Exhaust Gas Recirculation (EGR) Pressure Sensor

- Exhaust Gas Temperature Sensor
- Exhaust Oxygen (O2/Lambda) Sensor
- Exhaust Temperature Sensor
- Exhaust Soot Sensor
- Input Exhaust Gas Sensor
- Metering Device Compressed Air Pressure Sensor
- Metering Device Pressure Sensor
- Metering Service Temperature Sensor
- Nitrogen Oxide (NOx) Sensor(s)
- Output Exhaust Gas Pressure Sensor
- Particulate Soot/Matter Sensor (PM Sensor)
- Selective Catalytic Reduction Air Intake Humidity Sensor
- Selective Catalytic Reduction System Inlet/Outlet
- Selective Catalytic Reduction Temperature Sensor
- Upstream DPF Temperature Sensor

ENGINE

Internally Lubricated Parts Including:

- Head Bolts*
- Valve Seats*
- Valve Stem Seals*

*COVERED ONLY IF DAMAGED BY A COVERED COMPONENT**

RELATED ITEMS

- Cylinder Heads**
- Cylinder Liners**
- Engine Block**
- Engine Mounts**
- Flywheel Housing Gasket
- Front Crank Seal
- Front Housing Gasket
- Head Gasket**
- Intake Manifold Gasket
- Rear Main Seal

*NO PROGRESSIVE DAMAGE***

TRANSMISSION

Internally lubricated parts:

- Encoder Motor**
- Power Take-Off**
- Transmission Oil Cooler**
- Vacuum Modulator**
- Viscous Coupling**

*NO PROGRESSIVE DAMAGE***

DIFFERENTIAL(S)

Internally lubricated parts including:

DRIVE SHAFT

- Driveshaft**
- Driveshaft Center Support Bearing**
- Driveshaft Yokes**
- Flex Disc(s)**

*NO PROGRESSIVE DAMAGE***

ENGINE ACCESSORY

- Engine Air Compressor

FUEL INJECTORS

- Fuel Governor
- Fuel Pressure Regulator
- Fuel Sender Assembly
- Fuel Tank

COOLING SYSTEM

- Coolant Recovery Tank
- Coolant Surge Tank
- Radiator Brackets**

CABIN COMFORT

- AC Pressure Switches
- Accumulator
- Condenser & Condenser Fan Motor
- Expansion Valve
- Evaporator
- HVAC Heater core
- HVAC Temperature Control Head
- Idler Pulley & Bearings
- Orifice Tube
- Serpentine Belt Tensioner
- Temperature Control Valve

HVAC AIR COMPRESSOR

- Air Compressor Mounting Bracket***
- Compressor Clutch & Pulley

HVAC BLOWER MOTOR

- Blower Motor Fan,
- Blower Motor Resistor
- Plenum Blower Case

CABIN HVAC

- Control Cables
- Defrost Assembly
- Receiver Drier
- Refrigerant *in conjunction with a covered repair*
- Ductwork***
- Lines***

*PARTS ONLY COVERAGE, NO PROGRESSIVE DAMAGE IS COVERED.****

SUSPENSION

- 4WD Engagement Actuators
- 4WD Manual Locking Hubs
- Air Suspension Bag or Springs
- Coil Springs
- Constant Velocity Joint & Boot
- Electronically Controlled Variable Suspension Struts & Switches
- Leaf Springs: Shackles & Bushings
- Wheel Hub & Wheel Bearings
- Steering Knuckles & Spindles
- Torsion Bars & Struts

SUSPENSION

Upper/Lower Control Arm:

- Ball Joints
- Bushings
- Links
- Shaft(s)

Stabilizer Bar:

- Bushings
- Links

STEERING

- Bearings*
- Couplings*
- Idler Arm*
- Intermediate Shaft Pitman Arm*
- Mounting Brackets*
- Steering Column Shaft*
- Steering Relay Arm*
- Tie Rods & Ends*

*COVERED ONLY IF DAMAGED BY A COVERED COMPONENT.**

STEERING

Rack & Pinion:

- Bearing Kit & Housing,
- Electric Steering Assist Motor
- Rack Gear
- Steering Gear
- Steering Gear Linkage Bellows

Power Steering Pump

- Power Cylinder Hose Assembly
- Reservoir

ELECTRICAL

ENGINE

- Air Intake Temperature Sensor
- Air Pressure Sensor Misfire Sensor
- Ambient Air Temperature Sensor
- Atmosphere/Ambient Pressure Sensor
- Camshaft Position Sensor
- Camshaft Speed Sensor
- Centrifugal Crankcase Oil Separator (CCOSS) Sensor
- Compressor Inlet Sensor
- Crankshaft Position Sensor
- Crankcase Pressure Sensor
- Crankshaft Speed Sensor
- Cylinder Head Temperature Sensor
- ECM Manifold Pressure Sensor
- Electronic Engine Controls Humidity Sensor
- Engine-Brake Control Pressure Sensor
- Engine Oil Pressure Sensor
- Engine Oil Temperature Sensor
- Engine Position/Timing Sensor
- Front Cover Exhaust Temperature Sensor
- Intake Manifold Sensor
- Intake Manifold Temperature Sensor
- Intake Manifold Temperature/Pressure Sensor
- Intake Valve Actuator Oil Pressure Sensor
- Knock Sensor
- Mass Air Flow Sensor
- Multiple Functions Temperature Sensor
- Oil Breather Centrifuge Speed Sensor
- Optimized Idle Sensor
- Piston Coolant Sensor
- Position Not Specified Multiple Usage Sensor
- Shutterstat Temperature Sensor
- STC Viscosity Sensor
- Swirl Flap Position Sensor
- Synchronous Reference Sensor
- Temperature Climatic Combustion Control Sensor
- Throttle Input Absolute Pressure Sensor
- Timing Reference Sensor
- Vehicle Speed Sensor
- Wideband Oxygen Sensor

DIFFERENTIAL(S)

- Axle Temperature Sensor
- Differential Lock Power Switch Sensor
- Power Divider Differential Lock Sensor

TRANSMISSION

- Automation Controls Hydraulic Fluid Level Sensor
- Automated Transmission Clutch Actuator Sensor
- Automated Transmission Countershaft Speed Sensor
- Automated Transmission Gear Select Sensor
- Automatic Transmission Oil Level Sensor
- Automatic Transmission Oil Pump Speed Converter Sensor
- Automated Transmission Oil Temperature Sensor
- Automatic Transmission Pressure Transducer Sensor
- Automatic Transmission Range Sensor
- Automated Transmission Rotary (dual) Position Sensor
- Automatic Transmission Speed Converter Sensor
- Automatic Transmission Speed Sensor
- Automatic Transmission Temperature Sensor
- Automated Transmission XY Shifter Position Sensor
- Input Sensor
- Input Shaft Speed Sensor
- Line Pressure Sensor
- Load Sensor
- Main Shaft Speed Sensor
- Manual Lever Position Sensor
- Oil Heater Sensor
- Output Housing Speed Sensor
- Output Shaft Speed Sensor
- Output Speed Sensor
- Overlay Sensor
- Rail Select Sensor
- Transmission Low Air Pressure Sensor
- Transmission Speed Sensor
- Turbine Speed Sensor

FUEL

- Air/Fuel Ratio Sensor
- Fuel Pressure Sensor
- Fuel Pump Speed Sensor
- Fuel Rack Position Sensor
- Fuel Tank Fuel Level Sensor
- Fuel Tank Pressure Sensor
- Fuel Tank Vacuum Sensor
- Fuel Temperature Sensor
- Fuel/Water Separator Sensor
- Gaseous Fuel Leak Detection Sensor
- Injection Control Pressure (ICP) Sensor
- Rail Pressure Sensor

COOLING SYSTEM

- Coolant Pump Speed Sensor
- Charge Air Cooler Air Pressure Sensor
- Charge Air Cooler Air Pressure & Temperature Sensor
- Circuit-Breaking Thermostat Sensor
- Engine Coolant Temperature Sensor
- Fan Clutch Thermostat Sensor
- Fan Speed Sensor
- Low Coolant Sensor
- Radiator Fan Temperature Sensor

STEERING SUSPENSION BRAKES

- Driven Wheel Speed Sensor

TURBO

- Boost Pressure Sensor
- Pre-Turbo Pressure Sensor
- Throttle Plate Position (TPS) Sensor
- Turbocharger Boost Sensor
- Turbocharger Temperature Sensor
- Turbocharger Turbine Speed Sensor
- Turbocharger Vane Position Sensor
- Turbocharger Wastegate Sensor

MANUAL SWITCHES

- Air Horn Switch
- Air Pressure Gauge Signal Switch
- Air Restriction Switch
- Differential Lockout Indicator Lamp Switch
- Door Jamb Switches
- Driver Information Display Mode Switch
- Driver Information Display Set Switch
- Electric Door Lock Actuators
- Engine Coolant Temperature Indicator Switch
- Engine Metal Temperature Indicator Switch
- Fuel Tank Selector Switch
- High Water Temperature Warning Override Switch
- Instrument Panel On/Off Pre-Trip Light Switch
- Low Fuel Warning Indicator Switch
- Low Hydraulic Pressure Signal Switch
- Manifold Vacuum Gauge Switch
- Multi-Function Stalk Lever Switch
- Oil Pressure Switch
- Parking Brake Indicator Lamp Switch
- Power Seat Motors & Relays
- Power Steering Pressure Differential Switch
- Power Window Motors & Relays
- Propane Cylinder Cradle Latch Indicator Switch
- Starter Solenoid Switch
- Traction Control Rocker Switch
- Traction Control Switch
- Windshield Wiper Control Switch
- Window Washer Fluid Pumps
- Wiper Motor Relay

GAUGES

- Auxiliary Transmission Temperature Gauge
- Axle Oil Temperature Gauge
- Brake Saver Oil Temperature Gauge
- Dash Unit Temperature Gauge
- Engine Temperature Gauge
- Fuel Gauge
- Front/Rear/Steer/Center Drive Axle Oil Temperature Gauge
- Instrument Cluster
- Oil Temperature Gauge
- Outside Air Temperature Gauge
- Tachometer
- Transmission Temperature Gauge
- Voltage Regulator & Gauge
- Water Temperature Gauge

MODULES

- Air Ride Suspension ECU Control Module
- Antilock Brake System (ABS) Electronic Control Unit
- Control Arm Active Suspension Control Module
- Cruise Control Assembly
- Electronic Ignition Control Module
- Fuel Injection Control Modules
- Transfer Case Control Module
- Transmission Auto Shift Module
- Transmission ECU Module
- Transmission Gear Module
- Transmission Power Interface Module
- Shift Selector Module

ADDITIONAL ITEMS

- Collision Avoidance System
- Engine distributor
- Factory Keyless Entry Transmitter & Receiver
- Global Positioning System (GPS)
- Heads Up Display (HUD)
- Heated Seat Grids
- Ignition Coil
- Power Mirror Motors
- Spark Plug Wires
- Wiper Motor

Factory-Installed Anti-Theft Devices:

- Cab Alarm
- Horn
- Relay
- Switch
- Transmitter

Factory-Installed Radio

- Amplifier
- Dash-Mounted CD Player
- Tape Player

Memory Steering Wheel

- Actuators
- Control module
- Motors
- Sensors
- Switches

Power Seat

- Module
- Motor
- Relay
- Switch
- Track Assembly

WIRING HARNESS

- Air Horn Wiring Harness
- Distance Sensor Wiring Harness
- Security System Wiring Harness
- Speedometer Wiring Harness
- Trip Odometer Wiring Harness

Engine

- Engine Air Temperature Sensor Wiring Harness
- Engine Solenoids/Sending Units Wiring Harness
- Engine Wiring Harness

Transmission

- Automatic Transmission
- Main Wiring Transmission Harness
- Power Shift Control Wiring Harness
- Shift Tower Wiring Harness
- Speed Sensor Wiring Harness
- Transmission Oil Pump Wiring Harness
- Transmission Master Wiring Harness
- Transmission Range Selector Wiring Harness
- Transmission Shift Control Valve Wiring Harness
- Transmission Shift Control Wiring Harness
- Transmission Wiring Harness

Differential

- Rear Axle Traction Control Wiring Harness

Engine Accessory

- ECU Wiring Harness
- Electronic Engine Control Wiring Harness
- Electronic Injectors Wiring Harness
- Fuel Pump Wiring Harness
- Intake Manifold Temperature Sensor Wiring Harness
- Tank Fill Level Indicator to Tank Fill Level Gauge Wiring Harness
- Throttle Body Wiring Harness

Aftertreatment

- Aftertreatment Control Module to Air Control Unit Wiring Harness
- Aftertreatment Control Module to Metering Device Wiring Harness
- Aftertreatment Control Module to Pump Wiring Harness
- Aftertreatment Control Module to Tank Fill Level Indicator Wiring Harness
- Aftertreatment Control Module to Tank Heater Solenoid Valve Wiring Harness
- Aftertreatment Module to Sensors Wiring Harness
- Ambient Air Temperature Sensor Wiring Harness
- DEF System Wiring Harness
- DEF Tank Level Sensor Jumper Harness
- DEF Tank Pump Wiring Harness
- Diesel Particulate Filter (DPF) Jumper Harness
- ECM Harness
- EGR Pressure Sensor Wiring Harness
- EGR Valve Wiring Harness
- Exhaust Aftertreatment Device Wiring Harness
- Exhaust Gas Temperature Sensor Wiring Harness